


# BUMP FREE SHAVER

## Instructions

### TIPS FOR FIRST-TIME USERS:

If you are using an electric shaver for the first time, your skin will probably need to condition itself to this new shaving technique. Always shave with a light touch and use your Wahl Bump-Free shaver exclusively for three to four weeks, or longer if you have sensitive skin or if your whiskers grow at different angles in certain areas. Initially, your shaves may not be as close as you would like. But, stick with it, and you will eventually get the great shave you are looking for. If you have been using another type of electric shaver before, there may be a period of conditioning, before you receive maximum results from the Bump-Free shaver System.

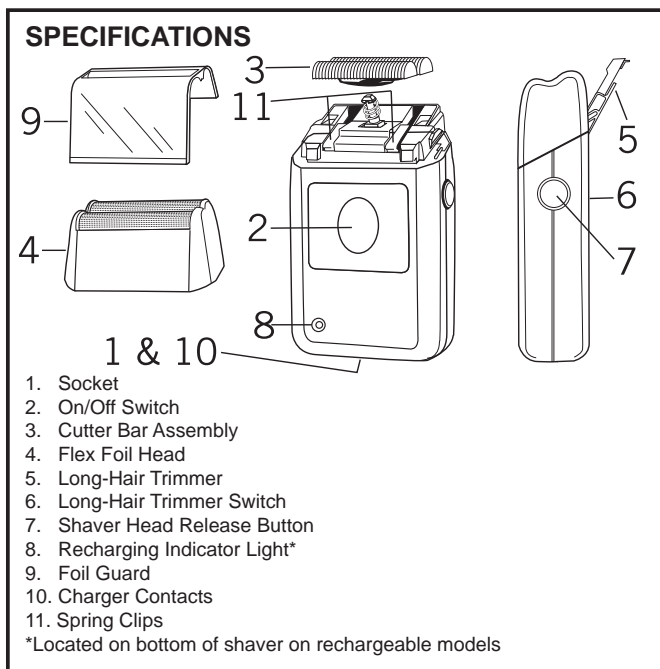

### SHAVING

Wahl's Bump-Free shaver will leave your face with a smooth, finished shave, for occasions when you really need to look and feel like you have just had a fresh shave.

Begin at the neckline, in short strokes, and continue to shave the remaining areas of your beard, by using short, soft strokes. Then, repeat in the reverse direction to insure optimum closeness. Make sure that you have the entire cutting head in contact with your skin at all time. Do not press hard against the skin, but allow the shaver to work for you. The results should provide you with the closest shave possible, without bumps or irritation.

*(As a general rule, we recommend replacing the Flex Foil Head every six months for maximum results. The foil is micro-thin with precise, raised inner cutting edges around the whisker holes. These raised cutting edges will wear with use, which will be indicated if your shaver slows down and the blades seem to get warm. Always replace the Foil Guard to protect the delicate dual foil heads when the shaver is not in use. To ensure continued shaving satisfaction, you should replace the foils often and cutter bar periodically. (We recommend foil replacement twice a year. Cutters should be replaced at least every two years.)*

Also, use the Bump-Free shaver, for a super-close shave on head and back of neckline as well. Begin at the back of the neckline, in short strokes, and continue to shave the remaining areas of your

head, by using short, soft strokes. Then, repeat in the reverse direction to insure optimum closeness. Make sure that you have the entire cutting head in contact with your skin at all time. Do not press hard against the skin, but allow the shaver to work for you. Like step one, the results should provide you with the closest shave possible, without bumps or irritation.


### AFTER SHAVING

Wash your skin with soap and warm water, and apply any talc or after-shave lotion of your preference. Clean your Bump-Free shaver as described before, or by using just the cleaning brush between major cleanings, by brushing away hair and debris from the blades and units.

### CLEANING

For your system to work properly, it is important that you begin shaving with blades that are clean and free of hair and other debris that might affect performance. It is recommended that you clean your Bump-Free shaver after every 2 or 3 shaves, using the cleaning brush, and following the instructions outlined below.

Remove the blade foil from the top of your Bump-Free shaver, by pressing the round button located on the right side of the unit, and lifting the flex foil head off of the shaver. This will expose the cutter bar assembly. The flex foil head may be cleaned of loose material, by gently tapping it against the surface of your sink. Be sure your sink is empty, and does not contain any water in it before you hold your Bump-Free shaver over it. Never hold any electrical appliance over any container that has water in it, as it may fall into the water and cause severe electrical shock. Remove any loose hair and debris from the cutter bar assembly and surrounding area, by brushing it away gently with your cleaning brush. Then, remove the cutting bar, by gently pressing down on it, and turning it 90 degrees. It should pop right off. Run the cutter bar under some warm water, and dry it off with a paper towel. Return it to the shaver by reversing this process, and replacing the foil head. By properly cleaning and maintaining your Bump-Free shaver it will provide maximum comfort and bump-free shaving.

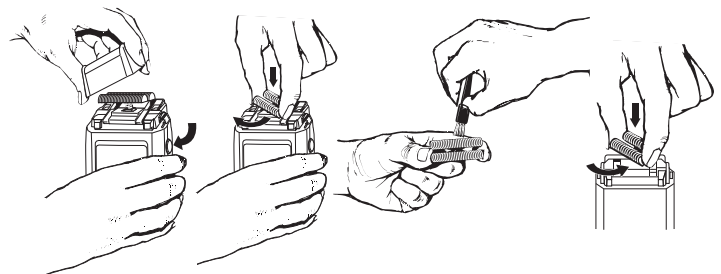

For the cleaning and care instructions of your shaver, please download the Care Instructions.

### SERVICE AND REPAIR

If you have problems with your WAHL product, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation  
Attn: Repair Department  
3001 Locust Street  
Sterling, IL 61081

Telephone (815) 625-6525

For products purchased outside the United States, contact your distributor.